Setup Screen

Here you can select to:

Setup Foobler

Choose your pet's picture for icon and background

Choose the sound effect
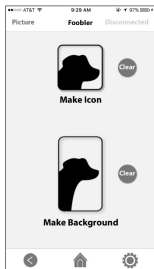
Send feedback

Review Privacy Policy and Terms of Service

Scan the QR code to download the app.

Or go to thefoobler.com to learn more!

Selecting Images

This screen will allow you to select both an icon and a background image for your app.

Tap either icon to be taken to your device's photo gallery. There you can choose, and resize or reposition for the images associated with your Foobler.
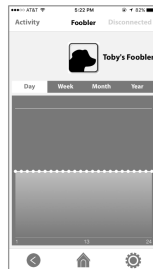
If you are using more than one Bluetooth Foobler you will be able to select individual images here to apply to each one.
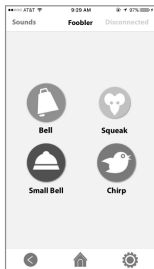
Selecting Sounds

On the sounds screen you will see four icons. Tap to listen and choose.
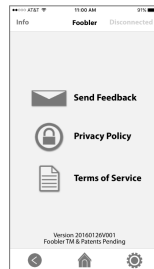
The last sound chosen will be the sound used by Foobler to alert your pet.

Activity Tracking

This screen will allow you to observe your pet's activity with Foobler and feedings throughout the session.

Much like a basic activity tracker this will show the amount of time played during the day, week and month.

Feedback and Information

From this screen you can:

Send feedback via e-mail to thefoobler@gmail.com

Review the Privacy Policy

Review the Terms of Service

Please visit: www.thefoobler.com
Email: support@thefoobler.com

L'chic
PET CARE SOLUTIONS
l-chic-pet.com

Foobler®

Puzzle Pods | 2 Cups | Digital Sounds | App-controlled Timer

1) Ensure that you have a Bluetooth LE compatible device

iPhone 4s and later, iPad 3rd Generation and later, and Android devices 4.4 and later

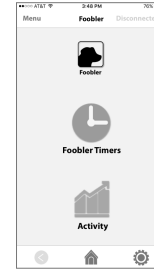**2) Download the Foobler App from iTunes or Google Play**

3) Make sure that your device's Bluetooth is turned ON and that Foobler is turned ON (look for blinking light under power button).

Open the Foobler App

Scan the QR code to download the app.

Or go to thefoobler.com to learn more!

Home Screen

Choose one or more Fooblers by tapping the image icon.

Tap Foobler Timers to choose the way you want to feed your pet.

Tap to view the activity screen.

Tap to back up to previous screen.

Tap to return to the home screen.

Tap the Gear Icon to access Settings.

Settings

Setup Foobler
Enter your Name, e-mail, Foobler name and Pair with Foobler.

Choose Pic
Choose the icon and background image from your photos.

Choose Sounds
Choose the alert sound that your Foobler will make.

Info
Choose to send feedback e-mail, Privacy Policy and Terms of Service.
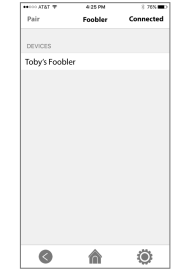
Setup Foobler

Enter your info:

Your Name

Your e-mail address

Choose and enter a name for your Foobler

Tap the corresponding Foobler icon to match the color for identifying more than one Foobler you may have

Tap to Pair with Foobler to be taken to the Pairing Devices screen.

Pairing with Foobler

Tap to Pair:

Verify Bluetooth is on and active on your device.

Verify that your Bluetooth Foobler is on. A blinking green light will show that it is active and ready to pair.

Tap to select the device when it displays on the list.

"Connected" will highlight when your Foobler is active and paired.

Please visit: www.thefoobler.com
Email: support@thefoobler.com

L'chic
PET CARE SOLUTIONS
l-chic-pet.com
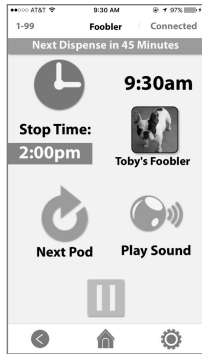
1-99 Minutes

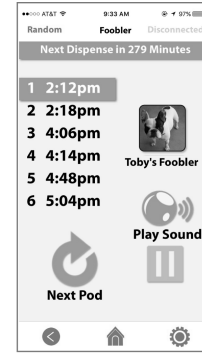In this mode you can set Foobler to dispense the six Pods in any time interval from 1 - 99 minutes. Once complete Foobler will hibernate.

Setup
· Using the slider, adjust position of the red dot to set the desired time dispense interval.
· Final dispense time will be shown in the Stop Time box.
· Tap the Play button (green arrow) to start.
· Foobler can be Paused or a Pod advanced manually or a sound played to get your pet's attention in the Running Screen.
· Tap Clear to reset.

Settings Screen

●●○○○ AT&T 📶 9:30 AM 🔋 97% ▮
1-99　　Foobler　Connected
🕘 9:30am
Set Pod Interval
[Toby's Foobler]
Every:45 minutes
:01 ————●———— :99
move left to right to set minutes
Stop Time: 2:00pm
▶ Clear
◁ ⌂ ⚙

Running Screen

●●○○○ AT&T 📶 9:30 AM 🔋 97% ▮
1-99　　Foobler　│ Connected
Next Dispense in 45 Minutes
🕘 9:30am
Stop Time:
2:00pm [Toby's Foobler]
Next Pod ↻   Play Sound 🔊
⏸
◁ ⌂ ⚙

Set 6

In this mode you can set Foobler to dispense the six Pods for their own individual release time. Once complete Foobler will hibernate.

Setup
· Tap each of the six Pod time boxes to set.
· You can scroll to set the time on the following screen.
· Tap the green Set button to return to set the next time.
· Continue until all six Pods are set to the desired time.
· Tap the Play button (green arrow) to start.
· Foobler can be Paused or a Pod advanced manually or a sound played to get your pet's attention in the Running Screen.
· Tap Clear to reset times.

Settings Screen

●●○○○ AT&T 📶 9:32 AM 🔋 97% ▮
Set 6　　Foobler　Connected
🕘 9:32am
Set Pod Time
1 12:30pm
2 1:45pm
3 2:15pm
4 4:30pm
5 5:30pm
6 6:00pm
[Toby's Foobler]
▶ Clear
◁ ⌂ ⚙

Running Screen

●●○○○ AT&T 📶 9:32 AM 🔋 97% ▮
Set 6　　Foobler　Connected
Next Dispense in 177 Minutes
1 12:30pm
2 1:45pm
3 2:15pm
4 4:30pm
5 5:30pm
6 6:00pm
[Toby's Foobler]
Play Sound 🔊
Next Pod ↻   ⏸
◁ ⌂ ⚙

Set 6 Random

In this mode you can set Foobler to dispense the six Pods during a random period between a Start and Stop time you select. Once complete Foobler will hibernate.

Setup
· Slide the green Start dot on the slider bar to select Foobler's starting time.
· Slide the red Stop dot on the slider bar to select Foobler's finish time.
· Press Play (green arrow) to begin.
· The Running screen will display the six Pod dispense times.
· Foobler can be paused, a Pod advanced manually or a sound played to get your pet's attention in the Running Screen.
Tap Clear to reset times.
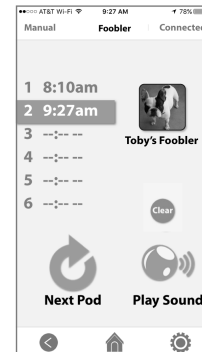
Settings Screen

●●○○○ AT&T 📶 9:33 AM 🔋 97% ▮
Random　Foobler　Disconnected
🕘 9:33am
Start Time
11:12am
Stop Time
5:37pm
Start
○————●————
Stop
am move left to right to set minutes pm
▶ Clear
◁ ⌂ ⚙

Running Screen

●●○○○ AT&T 📶 9:33 AM 🔋 97% ▮
Random　Foobler　Disconnected
Next Dispense in 279 Minutes
1 2:12pm
2 2:18pm
3 4:06pm
4 4:14pm
5 4:48pm
6 5:04pm
[Toby's Foobler]
Play Sound 🔊
Next Pod ↻   ⏸
◁ ⌂ ⚙

Manual Foobler

In this mode Foobler can be manually controlled by the app. Use this feature to aid in training your pet. Foobler will log times as the Next Pod is advanced.

· Tap Next Pod to manually advance and play alert sound.

· Tap Play Sound to alert your pet without advancing Pod.

· Tap Clear to reset.

Running Screen

●●○○○ AT&T Wi-Fi 📶 9:27 AM 🔋 78% ▮
Manual　Foobler　Connected
1 8:10am
2 9:27am
3 --:-- --
4 --:-- --
5 --:-- --
6 --:-- --
[Toby's Foobler]
Clear
Next Pod ↻   Play Sound 🔊
◁ ⌂ ⚙